




Item#: _____
 Quantity: _____
 Model #: E1-BS6OE-
 Project #: _____

E1 Drop-In Silverware Cylinder Basket

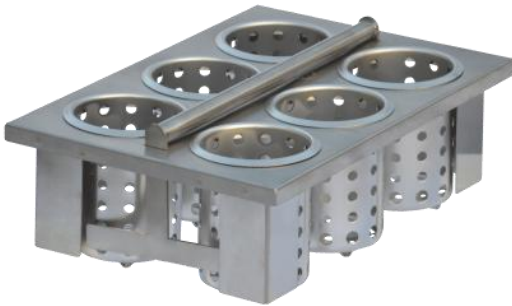

Model #: E1-BS6OE-SS
 Patent Pending

Standard Features:

- Drop-in silverware basket
- Works with the Steril-Sil E1 Silverware Handling System
- Holds six (6) Steril-Sil #S-500 Silverware Cylinders (included)
- Flanged body for dropping into dispensing unit or countertop cutout
- Drop-down handle falls flat for flatware dispensing directly from the basket
- Reloading one basket with six (6) preloaded cylinders increases efficiency
- Unit at-rest raises the silverware cylinders for easy lift out
- Wash silverware and cylinders directly in the basket for increased efficiency
- Round handle for easy carrying
- All welded 304 stainless steel construction
- NSF approved
- Made in the U.S.A.



Product Specification:

Steril-Sil model #E1-BS6OE- Drop-in Silverware Basket. Works exclusively with the Steril-Sil E1 Silverware Handling System. Holds six (6) Steril-Sil S-500 High-Capacity Silverware Cylinders (included). All-welded 304 series stainless steel construction. Includes a drop-down handle for dispensing flatware directly from the basket. NSF approved. Made in the U.S.A.

Notes:

Steril-Sil Company, LLC
 Phone: 800-784-5537
 Fax: 617-739-5063
 Email: quotes@sterilsil.com
 www.sterilsil.com



E1 Drop-In Silverware Cylinder Basket (cont'd)



Carrying Position - Cylinders are flush and the handle locks into position for secure carrying



At-Rest Position - Set on a work surface, the cylinders extend up 1/2" for easy removal



Drop-In Position - The cylinders and handle lay flush for dispensing



RP-25 Cylinder Color Choices



There is a wide range of cylinder color choices for the E1-BS6OE-RP baskets

E1 System Countertop Dispenser

Designed for use with Steril-Sil E1 Silverware Handling System

Model #	Description	Capacity
E1-BS6OE-SS	E1 System drop-in silverware basket with S-500 stainless steel cylinders	6 cylinders
E1-BS6OE-RP	E1 System drop-in silverware basket with RP-25 series colored plastic cylinders, chose from 12 different colors in the RP-25 series when placing your order	6 cylinders

Available Accessories:



E1- CBD-2V
E1 Countertop Dispenser



E1- CRT-3V
36" E1 System Open Cart



E1- BSC-16
E1 Basket Storage Cart



E1- SK-2
E1 Two-Basket Soak Sink